

Assembly:

Simple, fast and clean
using TZ-50 as an example.

Assembly



Easy work for all trades without complicated assembly: Interior fitters install the prefabricated gypsum units in the ceiling substructure or wall posts easily, quickly and cleanly. The risk of cracks appearing in joints or edges is virtually eliminated.

Once the joints have been trowelled and the walls or ceilings painted, assembling and wiring the precisely fitting system lights and single lamps is child's play.



1] The prefabricated gypsum unit is installed in these standard substructures.



2] Simple, fast and clean: Interior fitters screw the gypsum channel onto the substructure of the gypsum plasterboard ceiling.




3] The rounded channel contours fit seamlessly into the gypsum plasterboard ceiling.



4] The joints are then trowelled...



5] ...and the gypsum plasterboard ceiling is painted.

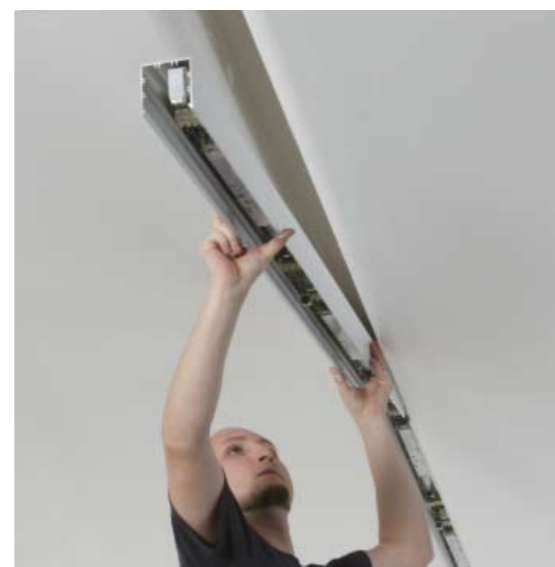

6] Precise fit: The lighting unit is installed in the gypsum channel by the electrician...



7] ...and subsequently screwed down and wired up.



8] The cover is clipped on – finished!



9] Everything from one source: The complete solution saves money and time for efficient installation.